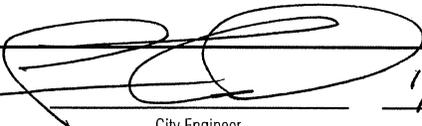



NO STEPS TO BE INSTALLED

NOTES:

1. FOR INLINE MANHOLES LAY PIPE THRU BOTTOM OF MANHOLES. AFTER CONCRETE IN BASE HAS SET, KNOCK OUT PORTION OF PIPE INDICATED WITH DASHED LINES. (FOR BRANCHED BASE SEE SS-4)

2. A DROP CONNECTION SHALL BE INSTALLED WHEN THE PIPE INVERTS INTO THE MANHOLE ARE 2 FEET OR MORE ABOVE THE OUTFLOW INVERT

Approved:  1/4/10
 City Engineer Date

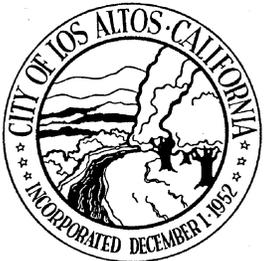

REVISION	
Description	Date

ENGINEERING DIVISION	
SANITARY SEWER MANHOLE (OUTSIDE DROP)	SS-2