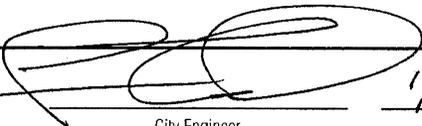



**INSTALLATION NOTES:**

1. USE 5/8" x 10" ALL-THREAD BOLT INSERTED 6" DEEP INTO CONCRETE WITH EPOXY
2. DRILL 4" INTO BOTTOM OF LEG OF BENCH SLIP OVER ALL-THREAD BOLT
3. ATTACH "L" BRACKET TO LEG AND ATTACH 3/8" x 2-1/2" EXPANSION ANCHOR BOLT INTO CONCRETE WITH EPOXY

**NOTES:**

1. MONARCH 6', COUNTRY CASUAL, TEAK BENCH OR APPROVED EQUAL (4' BENCH SIMILAR)
2. ALL WOOD MEMBERS TREATED w/ CLEAR PRESERVATIVE

Approved:  1/4/10  
 City Engineer Date

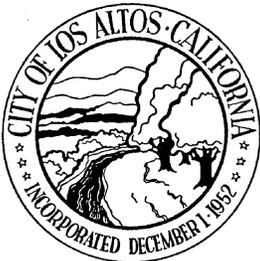

REVISION	
Description	Date

<b>ENGINEERING DIVISION</b>	
<b>DOWNTOWN BENCH</b>	<b>LI-7</b>