

NOTE:


- LAY PIPE THRU BOTTOM OF MANHOLES. AFTER CONCRETE IN BASE HAS SET, KNOCK OUT PORTION OF PIPE INDICATED WITH DASHED LINES. (FOR BRANCHED BASE SEE SD-3)

Approved: _____

City Engineer

Date

1/4/10

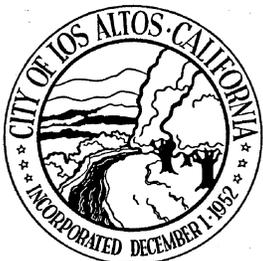

REVISION

Description

Date

ENGINEERING DIVISION

**STORM DRAIN MANHOLE
(CONCENTRIC CONE)**

SD-1